

IMPORTANT NOTICE

*Using the LocalTalk Interface
with EPL-N2000PS Version Printers*

The EPL-N2000PS is supplied with interfaces for connection to either EtherNet or LocalTalk Networks.

As shipped, the EPL-N2000PS has the EtherNet interface installed. Should you wish to connect to a LocalTalk network, the EtherNet interface **MUST** be removed prior to installation of the LocalTalk interface.

To remove the EtherNet interface and install the LocalTalk interface please follow the instructions in your printer reference guide pages 3-23 to 3-24.

Note:

Please keep this sheet with your reference manual.